

ENGINEERED TIMBER FLOORING BPIR Declaration

ENGINEERED TIMBER FLOORING BPIR Declaration



C3 (Fire Affecting areas beyond the fire source) C3.4(b)	Verification Method	All products covered by this statement have been tested in accordance with EN 14342 achieving a fire rating of D _{fl} -s1 or D _{fl} -s2.
D1 (Access Routes) D1.3.3 (d)	Alternative Solution	Belgotex engineered timber flooring is tested to DIN 51130 achieving an R11 slip rating. Or rated using CEN/TS 1576:2010 universal slip rating value.
E3 (Internal Moisture) E3.3.3 E3.3.5	Alternative Solution	Belgotex engineered timber flooring achieves the requirements when tested to ISO4760:2022 and are suitable for use within 1.5m of a sanitary fixing. Use of timber flooring in accordance with BRANZ advice on alternative solutions with Clause E3 of the building code [BRANZ, 01/11/2021]. BRANZ Article
F2 (Hazardous building materials) F2.3.1	Verification Method	Belgotex supplied engineered timber flooring is tested using ISO 14342 for volatile organic compounds and using no red-list materials. The products are also either Floorscore or Greenguard Certified.
G3 (Food preparation and prevention of contamination) G3.3.2 (a) G3.3.2 (b)	Verification Method	Belgotex engineered timber flooring is impervious and easily cleaned when installed to Belgotex's installation instructions.

Scope of use and Limitations

Scope	Limitation
For all building classified uses.	<ul style="list-style-type: none"> Engineered timber flooring is for interior use only. The substrate must have a relative humidity of 75% or below. Must be laid in accordance with Belgotex's installation guidelines. Must be laid by a qualified tradesperson. When installed in wet areas the flooring be installed as detailed in Belgotex NZs wet area installation guidelines.
For use as a flooring in an access route.	Belgotex engineered timber flooring is suitable for use in an access route.
In connection with underfloor heating including in-slab piped water heating.	Belgotex engineered timber flooring is suitable for use with underfloor heating not exceeding 27°C.

Conditions of use

Belgotex Engineered timber flooring must be installed according to the manufacturers installation guidelines and maintained according to Belgotex New Zealand's Care & Maintenance guidelines available at www.belgotex.co.nz.

Additional Information

For all specification, installation, maintenance and warranty information and all information supporting Belgotex New Zealand's claims refer to www.belgotex.co.nz

Belgotex[®]

ENGINEERED TIMBER FLOORING BPIR Declaration



No Belgotex Engineered timber flooring products are subject to a ban issued under [Section 26 of the Building Act](#).

Responsible Person

In accordance with Regulation 8, as the responsible person. I confirm that the information supplied in this declaration is based on information supplied to the company as well as the company's own processes and is therefore, to the best of my knowledge, correct.

Signed for and on behalf of Belgotex New Zealand Limited

Jeremy Parish

Managing Director

24/07/2024